


## SAFEDI in a nutshell



SAFEDI is worn on the upper part of the body and registers all close contacts in the company that could lead to a potential infection. It records if the distance between two people is not respected.

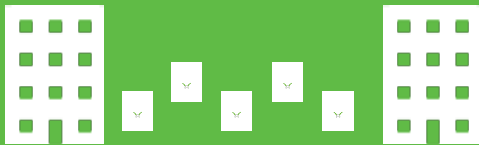

It is recommended that SAFEDI is worn continuously from the time you enter the company premises until you leave. All persons present in the company should wear a SAFEDI (employees as well as visitors, customers and suppliers).



In order to guarantee the protection of personal data, the evaluation of close contacts is only carried out by the person of trust in case of an infection. Close contacts are informed promptly. The recorded data of the SAFEDIs are located on a protected server and are deleted after 14 days.

## General information

The health of our employees and their families is extremely important to us. To address this issue in connection with the challenges posed by the COVID 19 pandemic, a number of measures have already been initiated and implemented in our company.

In order to ensure that the risk of a possible COVID-19 infection in the company is kept as low as possible, we use SAFEDI in our entire company.

We ask you to wear SAFEDI on the company areal at all times in order to quickly identify and break through possible chains of infection. Every single one of us contributes with the compliance of the already valid safety precautions and with wearing SAFEDI to protect himself, colleagues and the private environment.

## How SAFEDI works

If there is an uninterrupted close contact of 3 seconds between two SAFEDIs, the SAFEDI IDs are recorded. By synchronizing on the SAFEDI Synchro Hub, this information and the date are transferred to an encrypted database.

No personal data, no location information or times are recorded! If there is a proven infection, all SAFEDI IDs are notified who had close contact with the person concerned according to the anonymous close contact diary.

The notification is made via the person of trust. SAFEDI does not know which persons are notified.

**safedi**  
safe distance control



**Information for employees**

## Operating instructions

**Turn on SAFEDI:** Fully charge SAFEDI before using it for the first time. SAFEDI turns on as soon as it is moved.

**Wear SAFEDI correctly:** Attach SAFEDI with the clip in the front in the upper part of the upper body, so that it is vertically aligned. The device must be attached to the top layer of clothing and must be visible. Turn the clip until the lettering on the device can be read horizontally.

**Charging and synchronizing:** SAFEDI must be synchronized daily. This is done completely automatically in the SAFEDI Synchro Hub. Each SAFEDI has an assigned slot at the Synchro Hub. To synchronize, plug the SAFEDI into the Synchro Hub after the end of work. Charging also takes place automatically. The charging time is about two hours.

**Sleep mode:** The sleep mode is activated when the SAFEDI is laid down with the labelled side facing down for about 3 seconds. In sleep mode it flashes blue, does not react to other SAFEDIs or is invisible. To activate it, simply move it again.

## Possible faults and remedies

Unit does not respond:

Battery empty => Charge the battery. Battery is not being charged: Cable not (correctly) plugged in. => Check plug connections on both sides of the cable. Plug in the charger.

### LED-Status display



**Flashing Green:**  
SAFEDI in operation - Battery status OK - close contacts have already been recorded! Green - constant light: Report to person of trust.



**Flashing Red:**  
Close contact! - After 3 seconds of close contact, this will be recorded in the anonymous contact diary.



**Single Flash Magenta:**  
As soon as an entry has been made in the anonymous contact diary, the LED briefly flashes Magenta. The first time there is close contact between two SAFEDIs, an acoustic signal sounds.



**Flashing White:**  
Replaces flashing green light as soon as the SAFEDI has been synchronized and no close contact has been recorded yet!



**Flashing Orange:**  
Battery almost empty: Charge battery now



**Flashing Blue:**  
SAFEDI has been synchronized and is now in charge mode. Blue - constant light: SAFEDI has been synchronized and is fully charged.

### Important:

Each SAFEDI, together with the SAFEDI identification number (ID) and the QR-Code included in the packaging, forms an inseparable unit. Every SAFEDI-User should keep their SAFEDI-ID and QR-Code permanently and securely! The activation of the anonymous close contact diary is only possible with the original QR-Code.

**safedi**  
safe distance control

### Data security:

SAFEDI only stores the IDs that have undercut in the minimum distance during the course of the day. SAFEDI does not store geo or personal data.



**Numbering:**  
Assigned Synchro Hub slot

**Charging connection:**  
Micro USB cable  
Battery life SAFEDI: approx. 14 h  
Charging time approx. 2 h

**Housing:**  
Turn so that the lettering is horizontal.

**Clip:**  
For attaching to clothing in the upper body area



Ambient temperature: 0° C to 40° C

**SAFEDI does not protect against infection!**